



**Limited Parts Available
please call for availability**

no.	description	part no.	R 6011 for F 8333	no.	description	part no.	R 6011 for F 8333
1	Bubbler w/washer	7454-02		25	Retaining Washer	113-17	
2	Washer for Socket	28-17		26	Spring	1718-07	
3	Socket	25685-08		27	Friction Washer	21771-08	
4	Supply Tube (Valve to Bubbler)	1715-07		28	"O" Ring	1617-07	
5	Lock Ring	187-27		29	Static Seal	27-37	
6	Adjusting Nut	539-17		30	Spring Housing	34-22	
7	Spring	1708-07		31	Cam	171-37	
8	Spring Chamber	1174-17		32	Ball Race	527-17	
9	Lock Nut	1115-07		33	Handle	92-22	
10	Washer	94-27		34	Pin	433-07	
11	Diaphragm	152-27		35	Handle Nut	1150-07	
12	Yoke	1005-17		36	Handle Cap	1312-32	
13	Sleeve	1101-27		37	Supply Tube (Stop to Valve)	1712-07	
14	Static Seal	1719-07		38	Stop Body	34711-08	
15	Washer	9-27		39	Seat Washer Screw	159-17	
16	Seat Washer Holder	1441-37		40	Seat Washer	441-07	
17	Seat Washer	1398-27		41	Stem w/washer & Screw	19422-08	
18	Seat Washer Plate	1440-37		42	Cap Washer	125-07	
19	Screw	307-07		43	Stuffing Box Cap	21423-08	
20	Valve Body	25376-08		44	Stem Packing	1311-07	
21	Lock Nut	25045-08		45	Stuffing Nut	25015-07	
22	Friction Washer	1013-29		46	Valve S/A	7461-02	
23	Escutcheon	1198-32		47	Stop S/A	7479-08	
24	Stem	1711-07					

Note - Access Plate (not illustrated) - #1376-29