


Tub/Shower Single Control Washerless 01 Top Brass Series

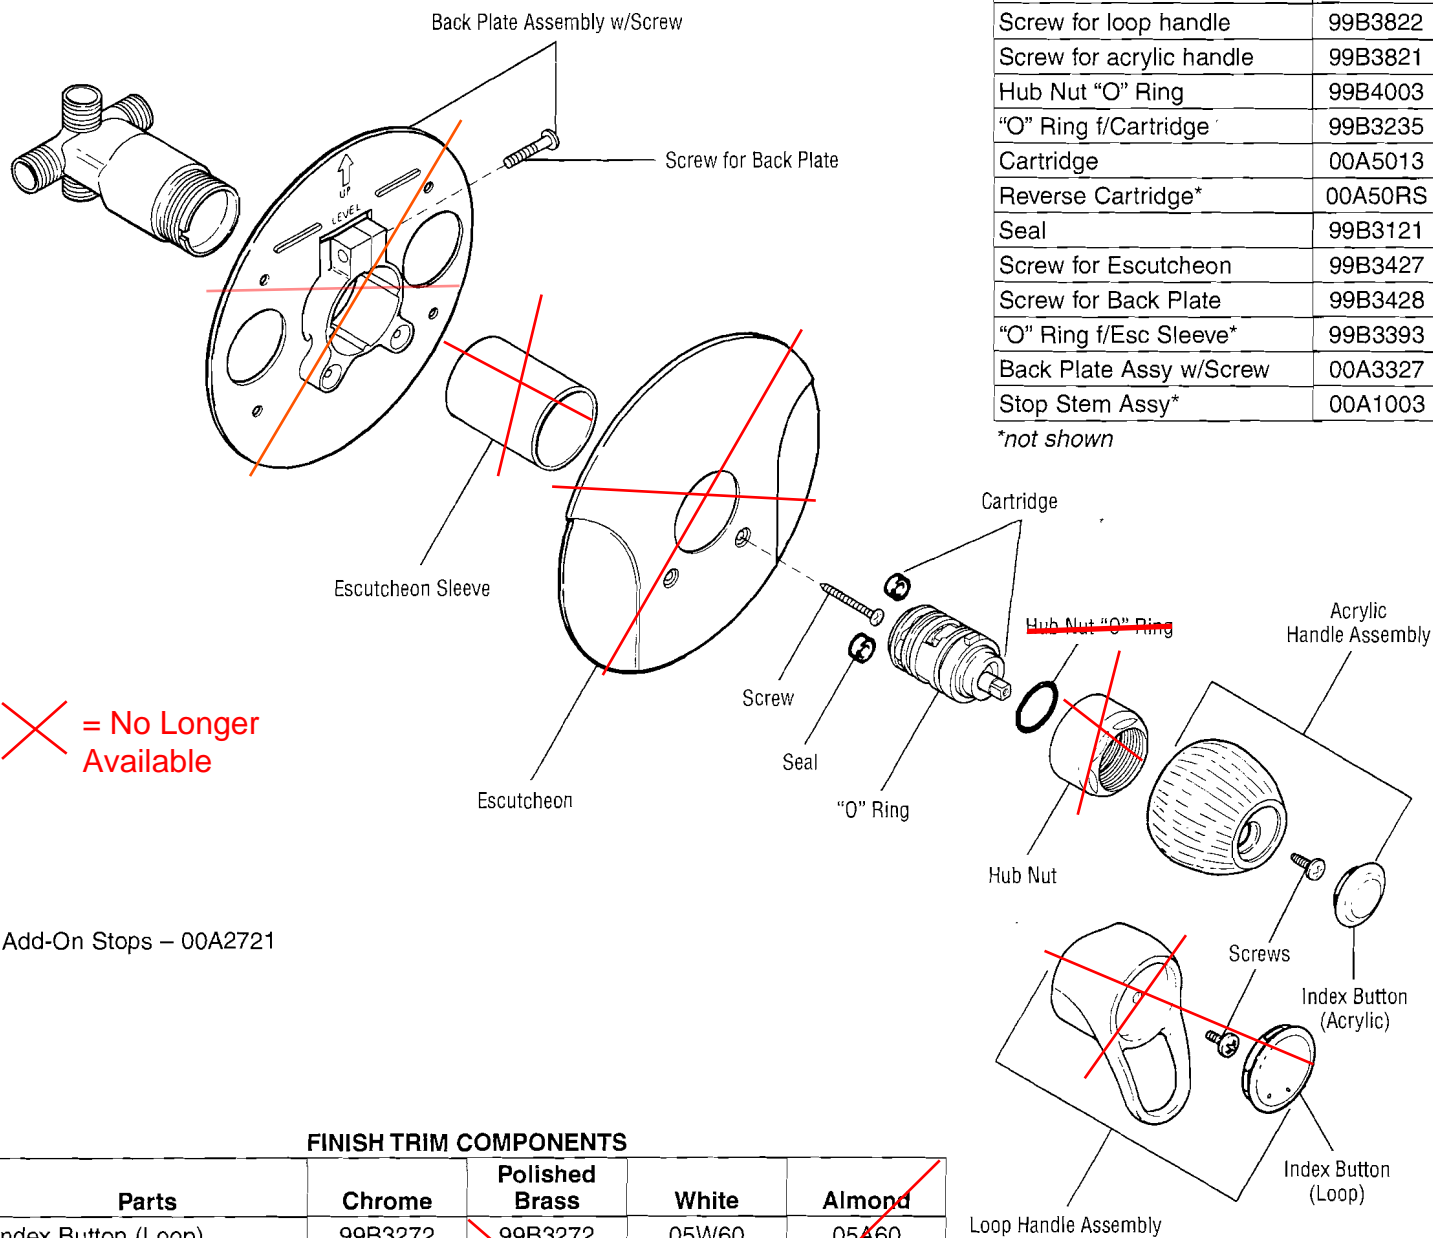

Common Parts	Part No.
Screw for loop handle	99B3822
Screw for acrylic handle	99B3821
Hub Nut "O" Ring	99B4003
"O" Ring f/Cartridge	99B3235
Cartridge	00A5013
Reverse Cartridge*	00A50RS
Seal	99B3121
Screw for Escutcheon	99B3427
Screw for Back Plate	99B3428
"O" Ring f/Esc Sleeve*	99B3393
Back Plate Assy w/Screw	00A3327
Stop Stem Assy*	00A1003

*not shown

X = No Longer Available

Add-On Stops – 00A2721

FINISH TRIM COMPONENTS

Parts	Chrome	Polished Brass	White	Almond
Index Button (Loop)	99B3272	99B3272	05W60	05A60
Index Button (Acrylic)	99B9003	99B9003	—	—
Loop Handle Assembly	00A5043	00G5043	00W5043	00M5043
Acrylic Handle Assembly	00A5042	00A5042	—	—
Hub Nut	00C3204	00G3204	00W3204	00M3204
Escutcheon	99B3326	00G3326	00W3326	00M3326
Escutcheon Sleeve	99B3325	00G3325	00W3325	00M3325
Showerhead, Arm & Flange*	15044	00G5044	00W5044	00M5044
Tub Spout (metal)*	15161	00G5161	00W5161	—
Tub Spout (non-metal)*	15285	00G4441	—	—
Diverter Spout (metal)*	15100	00G5100	00W0325	00M0325
Diverter Spout (non-metal)*	15284	00G4455	—	—

*not shown